

Ladibug[™] 4K Visual Presenter Image Software User Manual - English

Table of Contents

1.	lr	ntroduction	. 3
2.	S	System Requirements	. 3
3.	lı	nstall Ladibug™ 4K	. 4
	3.1	Install with Windows Vista / 7 / 10	4
4.	C	Connection to the Hardware	. 6
5.	S	Start to Use Ladibug 4K	. 7
	5.1	Use the USB cable to connect the computer and camera	7
	5.2	Use the image sharing server to connect the computer and camera	7
6.		Operation Interface Description	. 9
	6.1	Software screen description	9
	6.2	Image browser thumbnail	12
	6.3	Large picture of image browser	13
	6.4	Camera Settings (image setting)	14
	6.5	Time Lapse (Burst Settings)	15
	6.6	Annotation Settings (settings of annotation tool)	16
	6.7	Setting (Advanced)	17
7.	F	unction Descriptions	18
	7.1	I would like to turn on/off camera	18
	7.2	I would like to optimize the image	18
	7.3	I would like to freeze the live image	18
	7.4	I would like to turn on/off the lamp	18
	7.5	I would like to zoom in/out images	18
	7.6	I would like to adjust the brightness	18
	7.7	I would like to capture images	18
	7.8	I would like to capture images continuously	18
	7.9	I would like to record	19



3.	Troubleshooting	23
	7.16 Change the setting of firewall	. 21
	7.15 I would like to change the operating languages of the software	. 21
	7.14 I would like to manage stored image	. 20
	7.13 I would like to use the spotlight mode	. 20
	7.12 I would like to use the mask mode	. 20
	7.11 I would like to add textual annotation to images	. 20
	7.10 I would like to annotate the displayed image	. 19



1. Introduction

After installing the Ladibug™ 4K software, you can use the following functions:

- Control the Visual Presenter.
- Capture and record images
- Annotate the image, highlight important details and save it.
- Support the full screen function.

2. System Requirements

2.1 Windows Vista / 7 / 10

- Min CPU: Intel Core 2 Duo 2 GHz or above
- Min Memory: 1 GB (32-bits)/2 GB (64-bits) RAM
- Supporting Direct X 9 (WDDM 1.0 or later)
- Min Resolution 1024 x 768
- Min Hard Drive Space: 1 GB

2.2 4K Recording


- Min CPU: Intel i7 generation 6th or above
- Min Memory: 4 GB (32-bits)/4 GB (64-bits) RAM
- Supporting Direct X 9 (WDDM 1.0 or later)
- Min Resolution: 1920 x 1080
- Windows 10 (64 bits)
- GPU: Support H.264 hardware encoding



3. Install Ladibug™ 4K


3.1 Install with Windows Vista / 7 / 10

- 1. Please download Ladibug™ 4K software at Lumens website.
- 2. Extract the file downloaded and then click [Ladibug 4K] to install.
- **3.** The installation wizard will guide you through the process. Please follow the on-screen instructions and press [Next] for the next step.

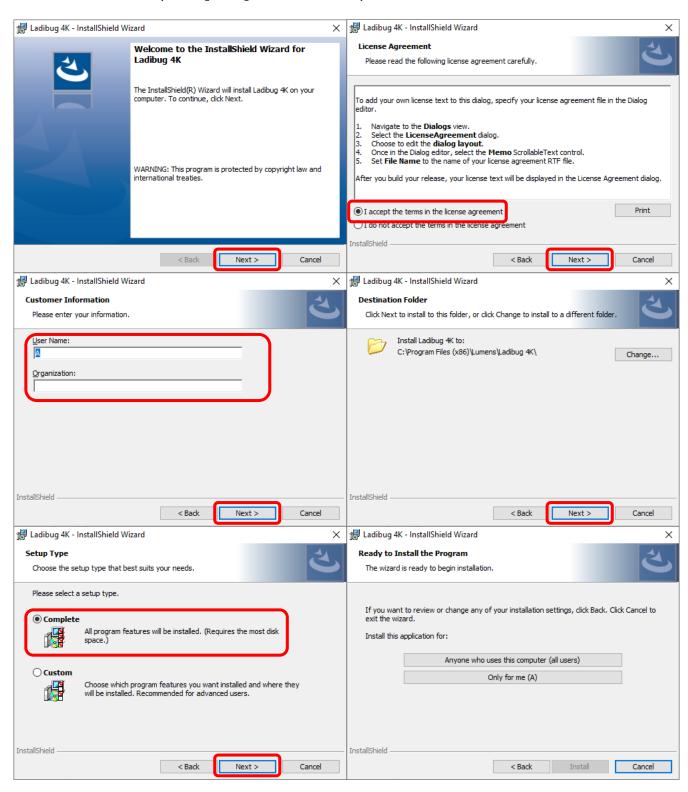



4. When the installation is completed, press [Finish] to end the installation.

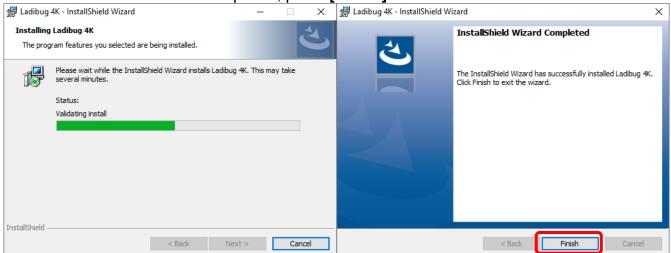




4. Connection to the Hardware




<Very Important> To ensure successful installation, please follow each of the following steps.

4.1 Connect the power cord of the Visual Presenter.

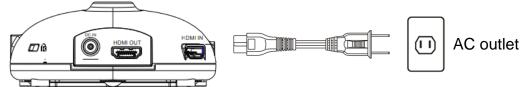

4.2 Connect USB cable to the Visual Presenter and your computer.

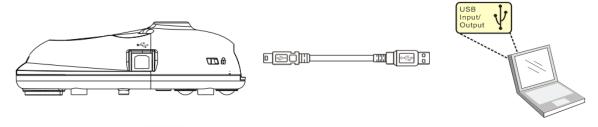

4.3 Turn on Power .

5. Start to Use Ladibug 4K

5.1 Use the USB cable to connect the computer and camera

- 1. Double click the [Ladibug 4K] icon and start Ladibug™ 4K.
- If firewall warning occurs in the first use, please check the [LAN] and then press [Allow to Access].
 - Safety Alert: Click [Unblock].
 - **POWER Frequency** setting page, please complete the settings following the instructions on the screen.

A live image is displayed when the setting is finished.

[Description] You are advised to confirm the local voltage/frequency before setting the POWER Frequency. For example, 60 Hz is applicable for America, Taiwan, Japan, etc; 50 Hz is applicable for Europe or other regions.

3. Start Using.

[Description] If no image is displayed, click
[USB Visual Presenter].



open [Search Window], and select

5.2 Use the image sharing server to connect the computer and camera

Complete image sharing settings for the camera before implementing this method.

- Equipment requirements:
- (1) Two computers with Internet access
- (2) One camera

5.2.1 Turn on the image sharing function

Connect one of the computers to the camera using a USB cable and turn on the image sharing function according to the following instructions:

To connect using a USB cable, please refer to <u>5.1 Use the USB cable to connect the computer and camera</u>

- Click to switch to the function settings page.
- Click [Share Image] to activate image sharing function.

[Description] Take note of the server address for image sharing, manually input the address on computers with different network segments to connect.






5.2.2 Connect to the image sharing server

Use the Internet to connect the camera to the image sharing server through the following steps:

- Click to open [Search Window].
- Select [Image Sharing Server].
- After automatic search is completed, select camera from the table to connect.
- If the camera does not appear on the table, manually input the IP address of the image sharing server (e.g. 192.168.2.128).
- Click , to connect.

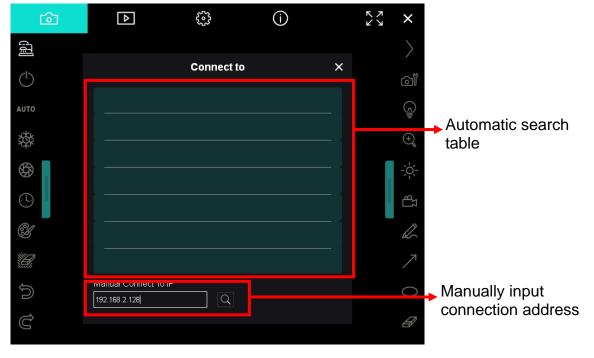



6. Operation Interface Description



Page switch		K	
Icon	Function Descriptions		
	Real-time image		
D	Image browser page		
£53	Function settings page		
①	Software information page		
23 34	Switch to Full Screen		
×	Disable Ladibug 4K		




3. Left function menu



Icon	Function Descriptions	
	Select the connection mode of camera	
\bigcirc	Turn on/off the Visual Presenter (does not support USB models)	
AUTO	Auto Focus	
燊	Freeze	
\$	Capture	
(Time Lapse	
¥	Setting of annotation tool	
	Eraser (Clear all the objects)	
Ð	Recover	
9	Redo	
	Fold the menu	




4. Right function menu

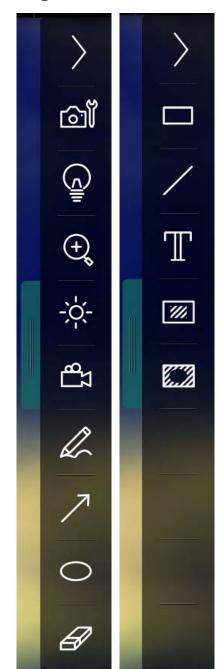

Icon	Function Descriptions	
>	Switch function menus	
O)	Image setting	
	Lamp On/Off	
\oplus	Zooming in/out the image	
- <u>`</u>	Brightness	
a _Z	Recording; this function is not supported in Wireless mode and Share Image mode	
2	Free-hand drawing tool	
7	Arrow	
0	Circling tool	
A	Eraser	
	Draw a rectangle	
/	Draw a line	
\mathbb{T}	Edit text	
///	Mask Mode	
	Spotlight Mode	
	Fold the menu	




6.2 Image browser thumbnail

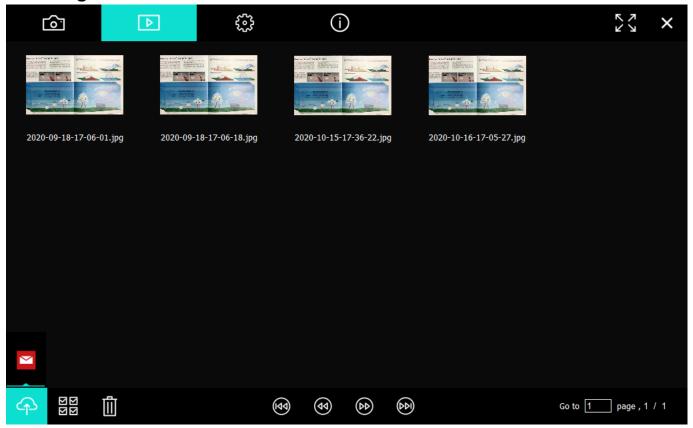

Icon Function Descriptions		lcon	Function Descriptions
4	Upload the file to the cloud	4	Move to the previous page
Send e-mail		(2)	Move to the next page
조전 조전	Select All	∞	Move to the last page
Delete		Go to 1 page ,	Move to a given page
(4)	Move to the first page	1/3	Current page/total number of pages



6.3 Large picture of image browser

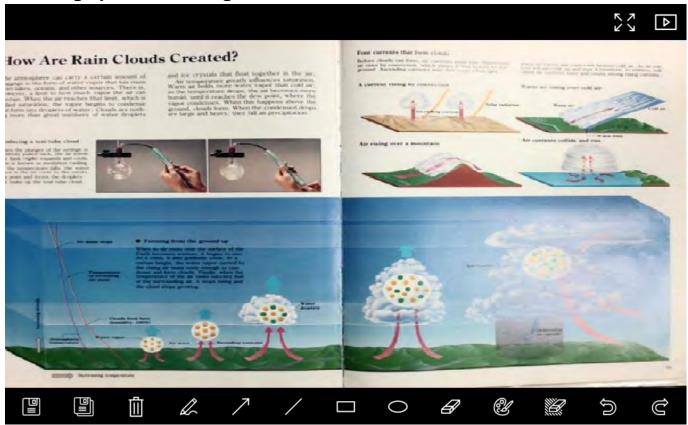

Icon	Function Descriptions	lcon	Function Descriptions
	Save files	0	Circling tool
Save as a new file		B	Eraser
Û	Delete	W	Setting of annotation tool
2	Free-hand drawing tool		Eraser (Clear all the objects)
7	Arrow	Ð	Recover
/	Draw a line	Û	Redo
	Draw a rectangle		




6.4 Camera Settings(image setting)

Control the live image via the Camera Settings interface.

The operating procedure is the same as the **control panel** and **remote control** of the Visual Presenter.

[Description] The display of the button may vary depending on product functions. An inactive button will grey out.

Click to access the Camera Settings menu

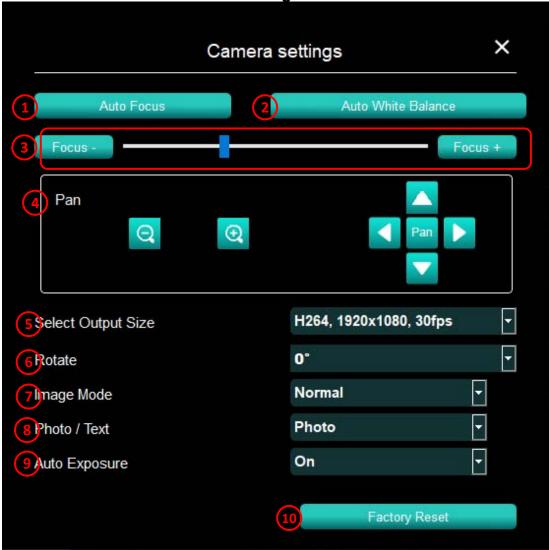


No.	Item	Function Descriptions
1.	Auto Focus	Adjust the best focal length
2.	Auto White Balance	Adjust the optimal white balance
3.	Focus	Manually adjust focal length on an object
4.	Pan	Manually adjust the short or long distance viewing and position of the lens
5.	Select Output Size	Set output resolution



6.	Rotate	Rotate the image: 0°/180°/Flip/Mirror
7.	Image Mode	Switch the Image mode Normal/Film/Slide/ Microscope
8.	Photo/Text	Set up Photo/Text mode
9.	Auto Exposure	Set on/off auto exposure
10.	Factory reset	Reset Visual Presenter to defaults

6.5 Time Lapse (Burst Settings)

Click to open Time Lapse menu

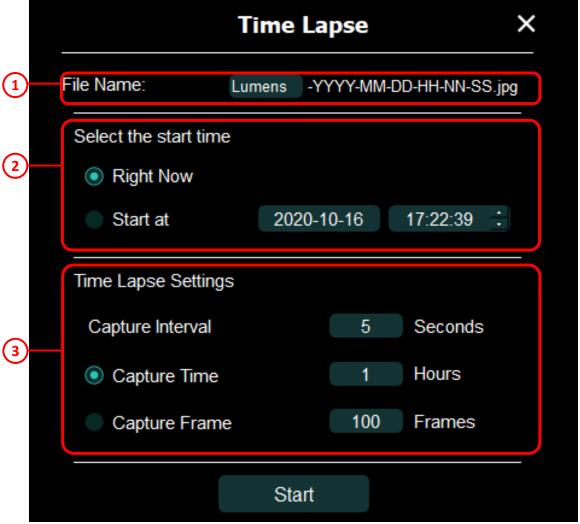


No.	Item	Function Descriptions
1.	File Name	Specify a file name
2.	Select the start time	Set the start time
3.	Time Lapse Settings	Set the capture interval and the capture time



6.6 Annotation Settings (settings of annotation tool)

Click to access the Annotation Settings menu

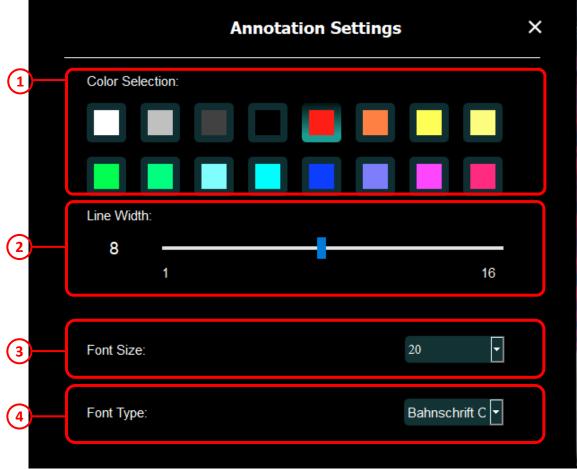


No.	Item	Function Descriptions
1.	Color Selection	Set the pen color
2.	Line Width	Select the line width
3.	Font Size	Select the font size
4.	Font Type	Select the font type



6.7 Setting (Advanced)

Click

to access the Settings menu

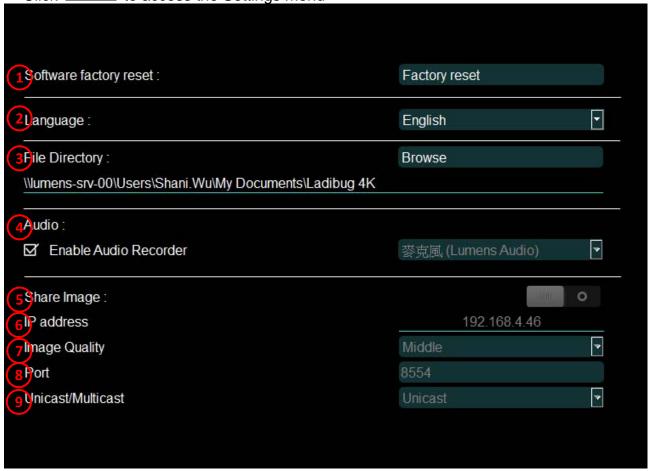

No.	Item	Function Descriptions
1.	Software factory reset	Reset to the default value
2.	Language	Select language
3.	File Directory	File storage path
4.	Audio	Click Enable Audio Recorder to activate recording function and select audio output device
5.	Share Image	Share Image; this function is not supported in Wireless mode
6.	IP address	Server IP address for image sharing
7.	Image Quality	Select image quality (high/medium/low)
8.	Port	Enter port settings (8500 ~ 9000)
9.	Unicast / Multicast	Select cast type



7. Function Descriptions

7.1 I would like to turn on/off camera

Click to turn on/off the camera.

7.2 I would like to optimize the image

> Click

7.3 I would like to freeze the live image

Click to freeze the live image of Ladibug™ 4K.

Click once again to lift the freeze.

7.4 I would like to turn on/off the lamp

Click to turn on/off the camera lamp.

7.5 I would like to zoom in/out images

> Click to open the scroll to adjust images.

Move rightward to zoom in the image, or leftward to zoom out the image.

7.6 I would like to adjust the brightness

> Click to open the brightness scroll.

Move rightward to increase brightness, or leftward to decrease brightness.

7.7 I would like to capture images

> Click to capture images.

browser page

<Note> When the images are captured, please view the images on the image browser page

7.8 I would like to capture images continuously

Click to open burst mode setting. Click [OK] after setting.

<Note> Refer to 6.5 Time Lapse (Burst Settings) for more information about Time Lapse setting

<Note> When the images are captured, please view the images on the image



7.9 I would like to record



- > Click to open the recording tool.
- > Click to start recording.
- Click to stop recording.
- > Click to close the recording tool.
- <Note> You can add annotation tool when recording but cannot save it
- <Note> The recording function is not available when connecting to the image sharing server or wireless network


7.10 I would like to annotate the displayed image

<Note> To annotate the stored images, please open the images on the image

browser page

Select an annotation tool.



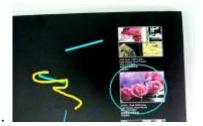

Mark or annotate the displayed image.

<Description> You can Click to capture images if they are live images.

If the image files are opened on image browser page



press the



[SAVE] or




[SAVE AS] to save files

7.11 I would like to add textual annotation to images

> Select T.

Click the screen to display the [Text Tool] window

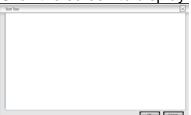

Enter text in the blank area and press [OK]

<Description> You can Click to capture images if they are live images.

If the image files are opened on image browser page press the [SAVE] or [SAVE AS] to save files.

<Description> You can click to capture images if they are live images. You can click [SAVE] or image files.

7.12 I would like to use the mask mode

- Click to open the mask mode.
 You can use the mouse to directly modify the length and the width of the block.
- Click to close the mask mode.

7.13 I would like to use the spotlight mode

- Click to open block mode.
 You can use the mouse to directly modify the length and the width of the block.
- > Click to change the spotlight shape.
- Click to close the spotlight mode.

7.14 I would like to manage stored image

Please switch to Image browser page to go through the following steps

- **7.14.1** Browse images
 - Open the Image browser page to view the thumbnails of stored images
 - Click on the rightward/leftward icon to switch to another page, or enter numbers to switch to a given page





• Double click on the image to display a large picture

Click to switch to Full Screen

Click to return to image thumbnails

7.14.2 Delete Image

Click the image or click Select All

Then click Delete to delete the selected image

7.14.3 Share images

Send by E-mail

1. Click the image or click Select All




2. Click to select how to upload images

Enter recipient, subject, and content, and click "Send"
 [Description] Email settings must be completed before sending images via email. Change settings according to the instructions of various operating systems and ISPs.

7.15 I would like to change the operating languages of the software

Switch to settings page

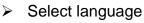

Restart the Ladibug 4K

7.16 Change the setting of firewall

7.16.1 Windows 7


- 1. Select [Console] in [Start] menu.
- 2. Click [System and Security], and then click [Allow a program through Windows Firewall].



[Description] Click [Windows Firewall] in the icon view of [Console].

3. Select [Change settings] in [Allowed programs and features] window.



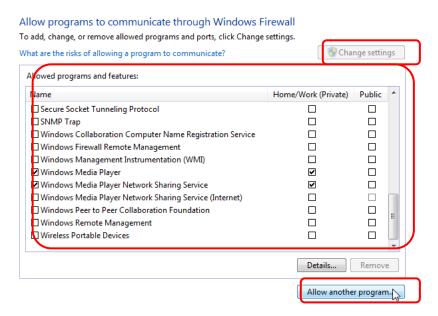

- 4. Please select [Ladibug 4K] program in the list.
- 5. If *Ladibug 4K* was not listed, please click [Allow another program], and then you will find *Ladibug 4K* program.
- Select [Ladibug 4K], and then click [Add]. If it was not listed, please click [Browse], select Ladibug 4K program, and then click [Enable].
 [Description] Ladibug 4K View may be displayed in the form of Ladibug 4K.exe.
- 7. Click [OK] in [Allowed Program] window.
- 8. Close [Windows Firewall Setting] window.



8. Troubleshooting

This chapter describes problems you may encounter while using *Ladibug 4K*. If you have questions, please refer to related chapters and follow all the suggested solutions. If the problem still occurred, please contact your distributor or the service center.

		e service center.
No.	Problems	Solutions
1	When the recording function is	When the computer is underperforming and the
	enabled, the preview screen	recording function is used, the preview screen may
	appears to have a green picture,	appear to be a green picture, broken image or the
	broken image, or the store files	stored files will be displayed abnormally. It is
	respond abnormally	recommended to reduce the resolution or switch to
		another computer with better performance.
2	The resolution of Ladibug 4K and	Ladibug 4K will store the last used resolution setting
	the resolution set in the visual	and may not use the resolution set in the visual
	presenter DIP Switch are different	presenter DIP Switch.
3	When Ladibug 4K software is	You can only choose either HDMI or USB output for 4K
	used, selection of the 4K	resolution, not both at the same time. Please check
	resolution is not available	whether the visual presenter has been set with HDMI
		4k output to the display.
		E.g.: When the visual presenter is set for HDMI output
		of 4k resolution, then the USB output cannot be set for
		4k resolution and only can be 1080P or 720P
		resolutions instead. If HDMI output is not set for 4K,
		then 3 different resolutions 4K/ 1080P/ 720P can be
		chosen in Ladibug 4k software.
4	Black screen is displayed in live	
	• •	
	re-installed	·
5	Unable to connect when using the	
	_	
		Ladibug 4K through the firewall. Please refer to 7.16
		Change firewall settings for Windows
		2. If Step 1 fails to solve the problem, change the
		, , , , , , , , , , , , , , , , , , , ,
		firewall. Please refer to antivirus software instructions to
		change firewall settings
		"
		the antivirus software
6	When the function of Time Lapse	Connecting USB Hub may result in insufficient
	·	
	remains still	
		'
		, , , , , , , , , , , , , , , , , , , ,
7	When the Image Sharing function	
		, ,
	be obtained	`
		connection), please disable the <i>Ladibug 4K</i> and restart
		the software and the Share Image function again.
6	When the function of Time Lapse is executing, Preview screen remains still When the Image Sharing function is enabled, no camera screen can	then 3 different resolutions 4K/ 1080P/ 720P can be chosen in Ladibug 4k software. 1. Remove the <i>Ladibug 4K</i> , and then restart the computer 2. Re-install <i>Ladibug 4K</i> 1. The system firewall settings may prevent images from being properly sent. Change settings to permit <i>Ladibug 4K</i> through the firewall. Please refer to 7.16 Change firewall settings for Windows 2. If Step 1 fails to solve the problem, change the firewall settings of the antivirus software by permitting <i>Ladibug 4K</i> through the firewall or suspending the firewall. Please refer to antivirus software instructions to change firewall settings 3. If step 2 still fails to solve the problem, please turn off the antivirus software Connecting USB Hub may result in insufficient bandwidth, which causes the machine unable to operate normally. It is recommended that the machine shall be connected to the computer directly through USB cable instead of USB Hub. If settings of host network are affected by the change of the Server network connection (for example: change from the network cable connection to wireless network connection), please disable the <i>Ladibug 4K</i> and restart

