

 
DC-W80 Quick Start Guide

⚠ Important


- *Please activate your warranty: www.MyLumens.com/reg.
- *To download the updated software, multilingual manuals, and Quick Start Guide, please visit Lumens™ website at: <https://www.MyLumens.com/support>.

1. Product Introduction


1.1 Product Overview

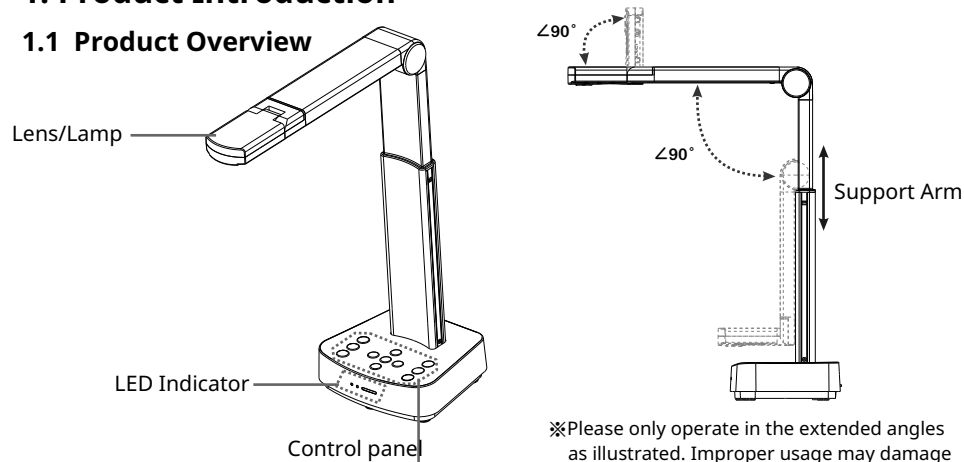

 1.2 I/O Interface

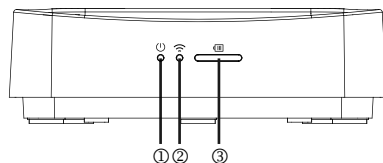

 
- ① **Power LED** Indicator
- ② **Wi-Fi LED** Indicator
- ③ **Battery LED** Indicator

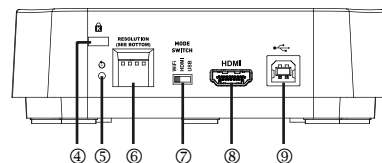


- ④ **Kensington** safety Lock
- ⑤ **Reset Button**
- ⑥ **DIP Switch** Setting
- ⑦ **Wi-Fi/HDMI/USB** mode switch button
- ⑧ **HDMI** output port
- ⑨ **USB Type-B** port

2. Installation and Connections

 ▼ Connect to a projector, monitor or TV(HDTV)

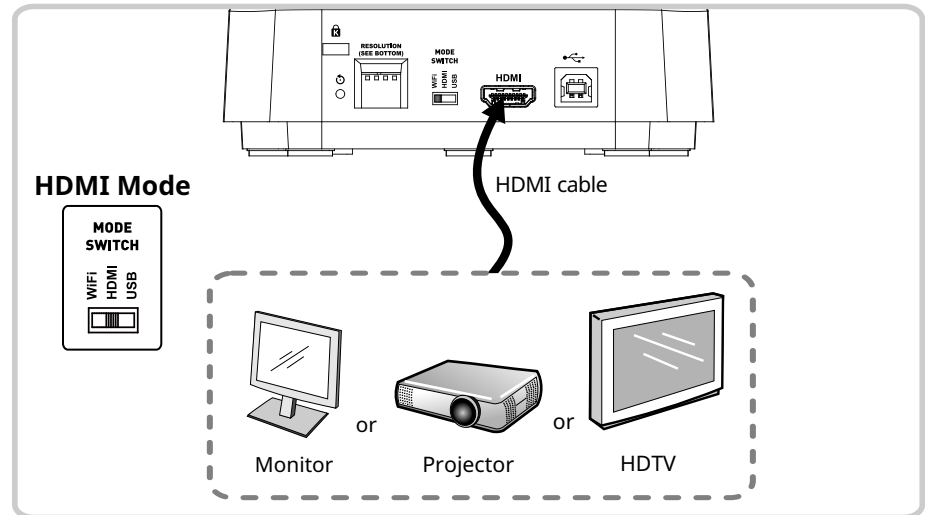


 ▼ Connecting to a computer and use Lumens™ software

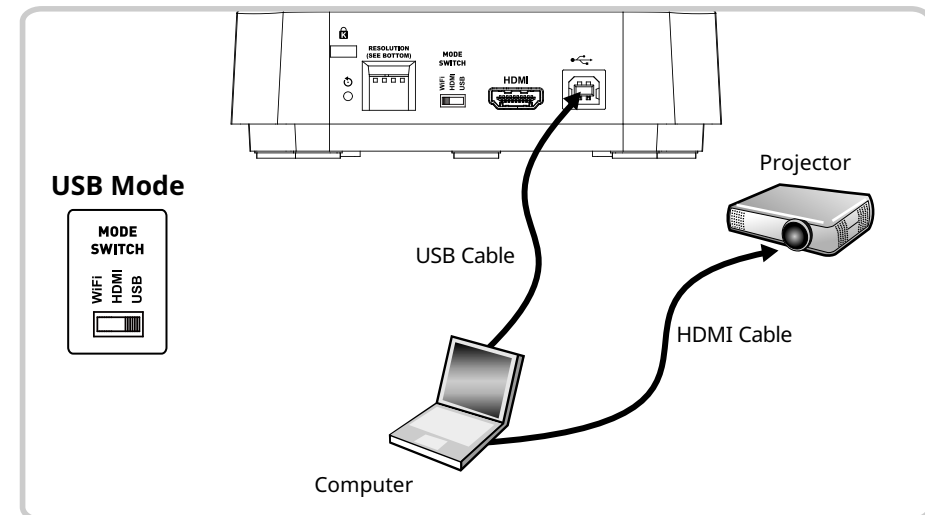

DC-W80 Quick Start Guide

 ▼ Connecting to a computer and use Lumens™ software

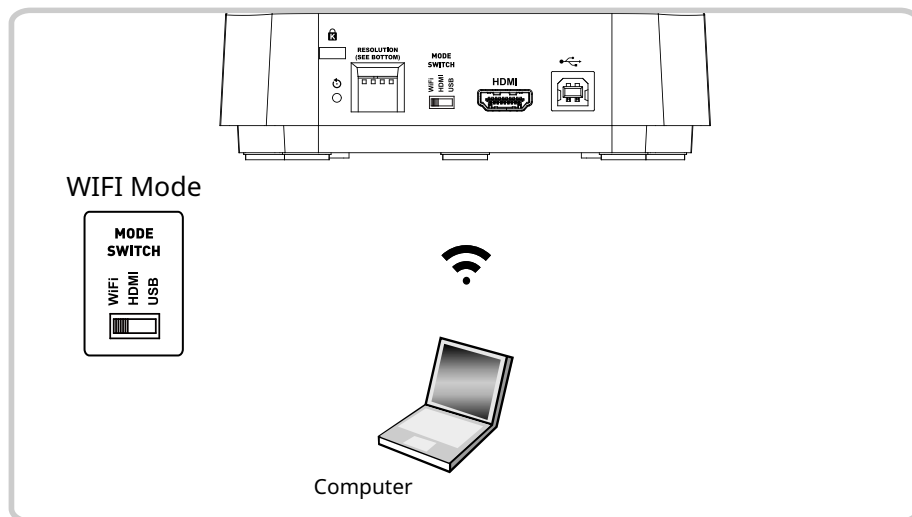

* Please download the relevant software from Lumens website.

3. Wi-Fi Mode Connection Setting

3.1 Network connection

1. Switch to the Wi-Fi mode and the Wi-Fi LED indicator will be displayed in blue.
2. Open the wireless network list on the computer.
3. Select the [DC-W80_5G_xxxxxx] in the network list, and input the password for connection (default: 88889999) to start the connection.

 
* xxxxxx : The last 6 digits of the MAC Address

3.2 Log in to the web page



1. Open the web browser, and enter the default IP [192.168.0.1] in the address bar.
2. Enter the login account [admin] and default password [9999], and click Login.
3. After logging to the web page, you can do the live preview and configure the settings on the web page.

4. Description of Battery Level

1. Press the Battery Check  button on the control panel to display the current battery level status. The indicator light is green.
2. Connect the USB cable and the flickering green light will indicate that it is charging.
3. Description of Battery Level for Battery LED Indicator :

	⇒ Battery level ≥ 75%
	⇒ Battery level 50%~75%
	⇒ Battery level 25%~50%
	⇒ Battery level 3%~25%
	⇒ Battery level < 3%

  5. Start Using

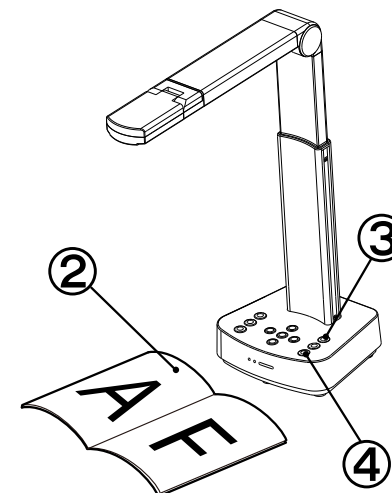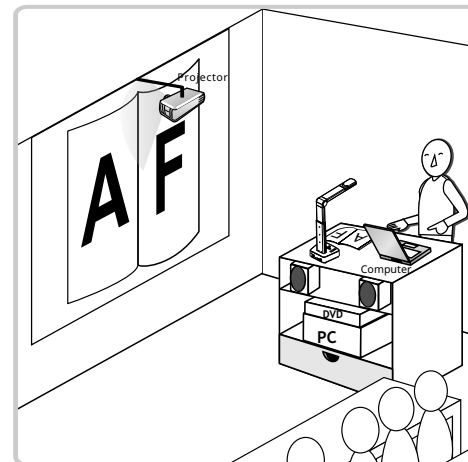

- ① Charge for a recommended 10.5 hours prior to first-time operation. The device is fully charged when all the power bars are full and the green light is constant on.
- ② Place an object to be displayed under the camera.
- ③ Turn on the power  and adjust the operation mode according to the connection method.
- ④ Adjust the support arm and lens to the appropriate positions.
- ⑤ Press [AUTO TUNE]  button to optimize the image.
- ⑥ You are ready to teach/present.