

CL510 Quick Start Guide

LumensTM

▼Menu

Open setting menu /exit the menu

▼Up / Down / Left / Right

Press Left/Right/Up/Down button to select required function

▼Enter

Enter/Activate functions

▼Laser

Switch on/off laser mark

▼Capture

Capture the image to internal memory

▼Record

Record motion images, press [RECORD] to record images into the internal memory; Press [RECORD] again to stop

▼DEL

Delete images in the internal memory

▼PAN


Enable/Disable the Partial Enlarged mode

▼Mask

Enter Mask/Spotlight mode

▼Photo/Text

Select image mode (Photo/Text/Gray)

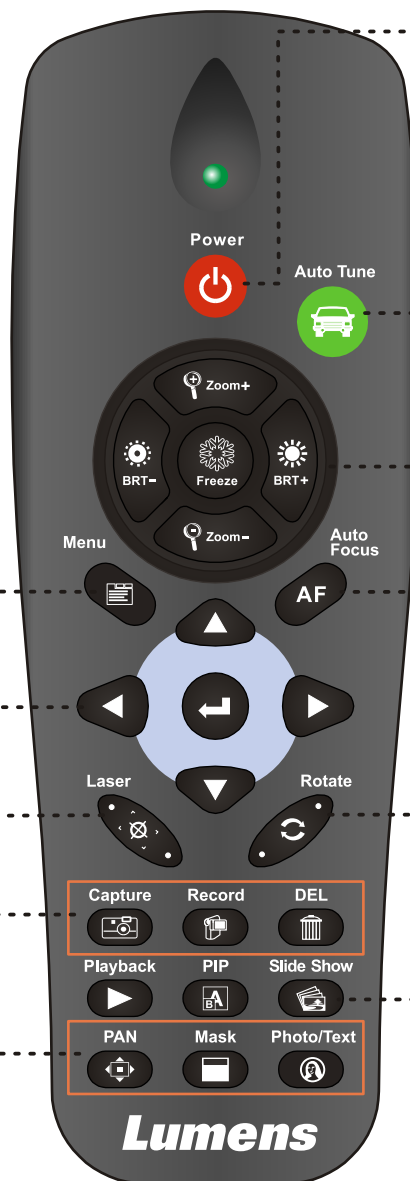

▼Power

Switch on/off the power

▼Auto Tune

Automatically adjust to the optimal brightness and focal length of images

▼Zoom +/-

Zoom in and out the image

▼BRT +/-

Adjust the brightness of the image

▼Freeze

Freeze the current image on the screen. Press again to defreeze

▼Auto Focus

Automatically adjust the focal length of the image

▼Rotate

Rotate the image by 0°/90°/180°/270°

▼Playback

Read files stored in the internal memory

▼PIP

Compare images (Compare live images with stored images)

▼Slide Show

Show the photos or videos in the internal memory in Slide mode